



X1020 - X1021 - X1022

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.apexa.de

Version: **1.0**

Date of preparation: 2021-05-12

Original instruction manual

1 Cleaning

1. Screw the thermal can lid off.
2. Wash the lid in warm running water with a mild cleaning agent.
3. Rinse in fresh water.
4. Wash the thermal can in warm water with a mild cleaning agent.
5. Rinse multiple times with fresh water to remove remains of the cleaning agent.
6. Wipe the exterior of the thermal can with a soft, damp cloth.
7. If the thermal can is not to be used for a longer time, clean it, as described above, and leave it open to dry.

Removing Remains from the Thermal Can

Hard water may leave white, mineral deposits inside the thermal can. Coffee usually colours the deposits and leave the brownish deposit.

1. In order to remove the deposits use a cleaning agent available on the market. Follow the descaling agent manufacturer's instructions on the packaging.
2. After cleaning, rinse the thermal can thoroughly with fresh water several times.
3. Leave the thermal can open to dry completely.

NOTE!

For cleaning and descaling of the thermal can we recommend the following Bartscher products:

Degreasing agent	Art. No. 173076
Descaling agent	Art. No. 173075