

**TBST200**



**A300111**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0  
Fax: +49 5258 971-120  
**Technical Support Hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)



Version: 1.0

Date of preparation: 2022-10-19

**Original instruction manual**

## Technical Data

<b>Name:</b>	<b>Cutlery trolley TBST200</b>
Art. No.:	<b>A300111</b>
Material:	stainless steel, plastic
Number of shelves:	1
Shelves dimensions (W x D), in mm:	590 x 310
Number of cutlery boxes:	2
Cutlery box dimensions (W x D x H), in mm:	511 x 286 x 110
Total load-bearing capacity, max. in kg:	60
Load-bearing capacity per level, max. in kg.:	30
Clearance between levels, in mm:	330
Number of swivel casters:	4
Locking swivel casters:	2
Diameter of swivel casters, in mm:	80
Number of caster dampers:	4
Material of caster dampers:	plastic
Dimensions (W x D x H), in mm:	594 x 305 x 1.205
Weight, in kg:	10,6

We reserve the right to implement technical modifications.

## Version / Characteristics

- Delivery form: self-assembly set, simple assembly
- Application areas:
  - cleaning
  - storage
  - serving
  - transportation
- Version of cutlery boxes:
  - 4 partitions
  - removable
  - plastic
- With handles

## Intended Use


As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:


- cleaning, storage and transportation of cutlery.

## Scope of Delivery / Part Name


- Unpack the cutlery trolley and remove the packing material pursuant to environmental regulations.
- Check completeness of delivery according to the list below:

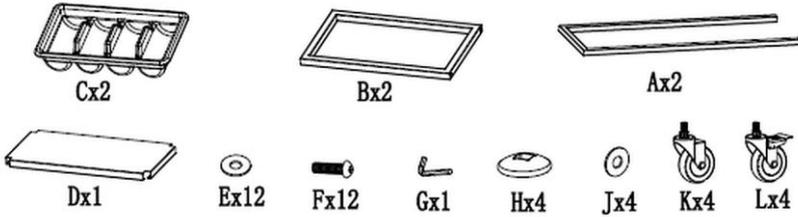

## Assembly

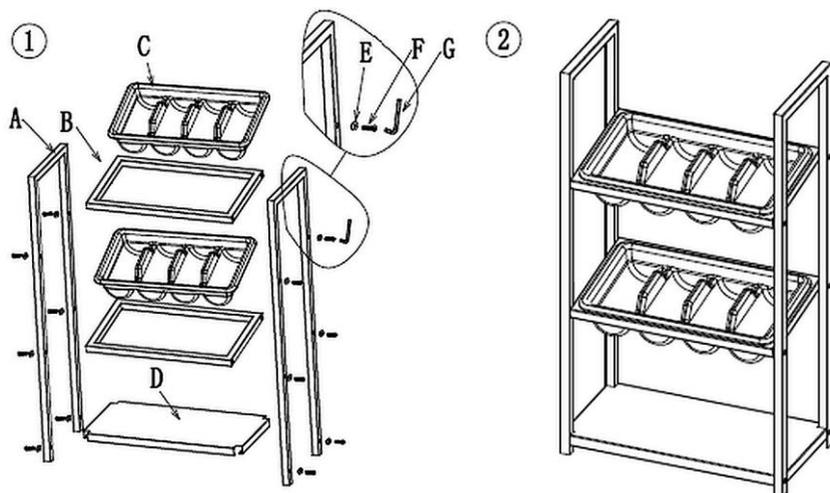

EN

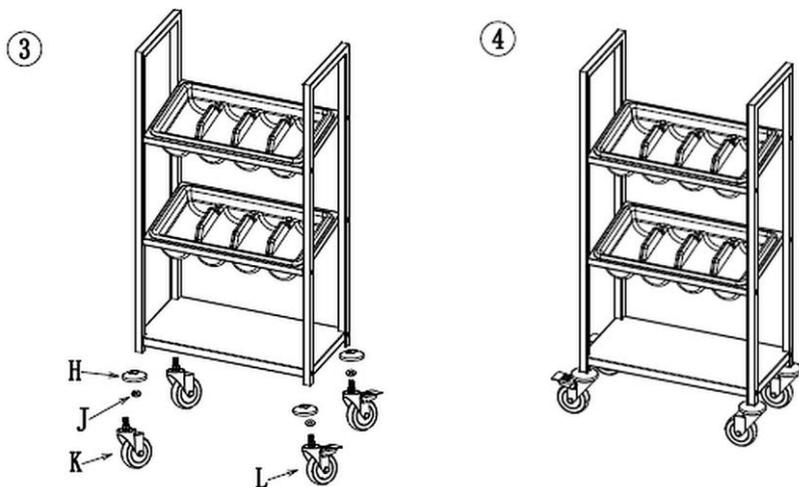

1. First, using washers (E) and bolts (F), fix the bottom shelf (D) and both frames of the cutlery box (B) to one of the lateral sections (A). Use Allen wrench (G) and tighten bolts. (Fig. 1)
2. As described above, fix the bottom shelf (D) and both frames of the cutlery box (B) to the second lateral section (A). (Fig. 1)
3. Place the cutlery trolley on its side.
4. Mount swivel casters (K, L) onto square tubing of lateral sections. Between each swivel caster and the square tubing of the lateral section, place one washer (J) and one damper.
5. Finally, screw swivel casters into square tubing of lateral sections. (Fig. 3)
6. Set the cutlery trolley on swivel casters. (Fig. 4)
7. Place cutlery boxes (C) in frames (B) provided to this frame.

## Installation

1. Check the stability of the cutlery trolley.
2. Level the cutlery trolley through screwing in and out swivel casters.
3. After setting the cutlery trolley in a designated place, lock 2 swivel casters with lockings to prevent accidental relocation or overturn of the tray trolley.

## Using Cutlery Trolley

1. After assembly, thoroughly clean the cutlery trolley observing instructions in section '**Cleaning**'.
2. Fill the cutlery boxes with cutlery.

Cutlery may be stored in a space-saving manner and well sorted out.

The cutlery trolley facilitates work in various sections of kitchen. Besides that, it is practical for users and prevents back from straining in service area.

Owing to the mobile cutlery trolley it is faster and easier to make tables and clean them.



## Cleaning

### **ATTENTION!**

**Scrubbing agents, washing agents with solvents or caustic substances may damage the surface of the cutlery trolley.**

For cleaning, use suitable cleaning agents only.

1. In order to facilitate cleaning, you may remove cutlery boxes.
2. Wash cutlery boxes with warm water with a mild washing agent and a soft cloth.



EN

3. Clean the cutlery trolley and the shelf regularly with warm water and a soft, damp cloth. Use a mild cleaning agent when required.
4. Finally, thoroughly dry all cleaned parts and surfaces with a soft cloth.