

2500 1R



A150691

ENGLISH

Table of contents

1. Safety 20
1.1 Key to symbols 20
1.2 Safety instructions 21
1.3 Proper use 25

2. General information 26
2.1 Liability and Warrantees 26
2.2 Copyright protection 26
2.3 Declaration of conformity 26

3. Transport, packaging and storage..... 27
3.1 Delivery check 27
3.2 Packaging..... 27
3.3 Storage..... 27

4. Technical data 28
4.1 Technical data 28
4.2 Overview of parts 29

5. Installation and operation..... 30
5.1 Installation 30
5.2 Operation..... 32

6. Cleaning and maintenance 35

7. Waste disposal 36

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



DANGER!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.2 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with the device.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device is not adapted for use with an external timer or remote control.
- This device may only be operated in technically proper and safe condition.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**

- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not lay the power cable over carpets or other inflammable materials. Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.

- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Disconnect the device from the electric power supply.
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



HOT SURFACE! Burn hazard!

Follow the safety instructions listed in order to avoid the hazard:

- The housing and the grill plates of the appliance become very hot. during operation. Do not touch them with bare hands. Use always the operating handle in order to open the device. Use appropriate kitchen utensils for laying and taking of food.
- Also after switching off, the device remains hot for some time. Before cleaning or moving it to another place wait until the device cools down first.

- **Never** move this appliance during operation.



WARNING! Fire or explosion hazard!

Follow the safety instructions listed in order to avoid the hazard:

- In order to avoid risk of fire and damage to the device, **never** place kitchen utensils, towels, paper and the like on the grill plate during operation.
- **Never** operate the device near combustible, easily flammable materials (e.g. petrol, spirit, alcohol etc.). They evaporate through heating and in case of contact with ignition sources deflagrations can occur which can lead to serious personal injuries and property damages.
- When a fire arises disconnect it from the power supply before you initiate appropriate measures for fire-fighting. Provide sufficient supply of fresh air.

Caution: Never extinguish the fire with water when the power plug is connected to the socket. **Electric shock hazard!**

1.3 Proper use



CAUTION!

The device has been designed and built for commercial use and should be operated only by qualified personnel in kitchen facilities.

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

Contact grill is designed **only** for **grilling** appropriate food and **heating** bread, toasts, short-baked products and similar food.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.


4. Technical data

4.1 Technical data

Name	Contact grill 2500 1R
Code-no.:	A150691
Material:	housing: stainless steel grill plates: cast iron
Realization:	<ul style="list-style-type: none">▪ Number of grill units: 1▪ Grill surface type: grooved▪ Digital display for programming and storing the time▪ Timer▪ ON / OFF switch with indicator▪ Heating indicator▪ Fat collection container
Degree of protection:	IP23
Power supply:	2.5 kW / 220-230 V~ 50/60 Hz
Temperature range:	100 °C to 300 °C
Dimensions:	W 400 x D 485 x H 285/600 mm
Grill surface size:	360 x 270 mm
Weight:	25.4 kg
Includes:	1 scraper for cleaning the grooved surface


We reserve the right to make technical changes!

4.2 Overview of parts

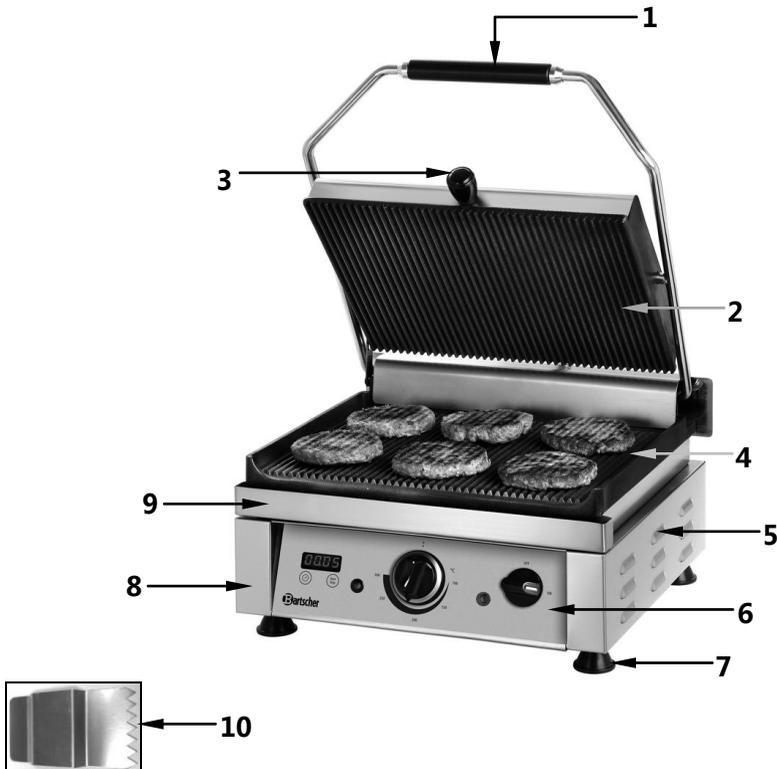

- 1 Thermal insulator handle
- 2 Upper grill plate
- 3 Handle for setting the upper grill plate
- 4 Lower grill plate
- 5 Ventilation holes
- 6 Control panel
- 7 Feet
- 8 Body
- 9 Fat collection container
- 10 Cleaning scraper

Control panel

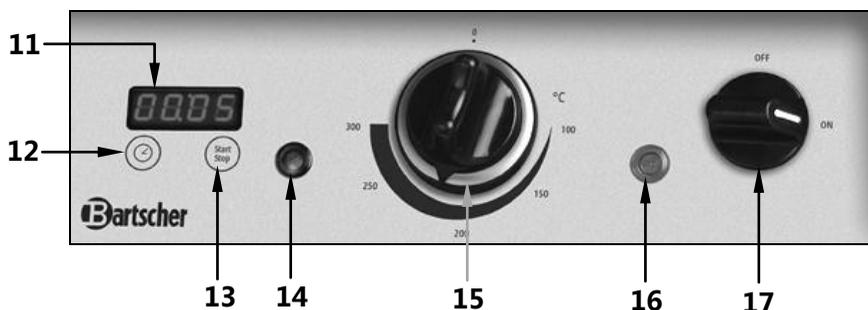

- 11 Digital display
- 12 Time setting button:
- 13 **Start/Stop** button
- 14 Heating indicator (green)
- 15 Temperature controller knob
- 16 Indicator light (red)
- 17 **ON/OFF** switch

5. Installation and operation

5.1 Installation



CAUTION!

All installation, connection, and maintenance works must be realized only by the qualified and authorized professionals, according to the international, national, and local regulations valid in the country of installation.

Positioning

- Unpack the device and discard the entire packaging material according to the regulations valid in the country of installation.
- Place the device in a well ventilated room or under the ventilating hood to efficiently remove vapours produced when cooking dishes.
- Place the device on an even, stable, dry and waterproof and heat-resistant surface.

- **Never** place the device on an inflammable surface.
- **Never** place the device in wet or damp locations.
- Place the device so that it is easily accessible, leaving enough space to freely service the device and ensure appropriate air circulation.
- **Never** place the device directly against walls, low walls, furniture or other objects which are made of flammable material. Keep a distance of at least 10 cm at the sides and at the rear from walls and other objects. Take into account the applicable fire protection regulations.
- If keeping the above mentioned distance is impossible, apply appropriate safety measures (e.g. heat-resistant foil), which will ensure keeping the wall's temperature within the safe range.
- Before the first use, remove the protective foil from the device. Remove the foil slowly not to leave glue residues. Remove possible glue residues with appropriate solvent.



CAUTION!

Never remove the type plate and warning signs from the device.

- Place the unit so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

- The electrical circuit in the socket must be secured to at least 16A. Only connect the unit directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

Prepare the device


- The device should be thoroughly cleaned before the first use. Follow instructions in section 6 “Cleaning and maintenance”.



WARNING

Never use the device without the properly attached drip tray.

- Mount the fat collection container in front of the device, under the edge of lower grill plate. That container is used for collecting the grilling residuals dripping during the process.

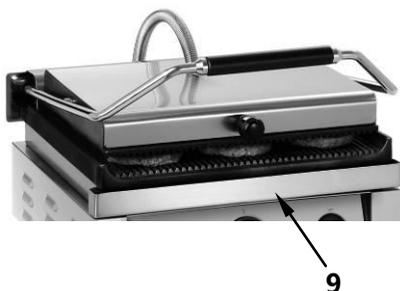


- Grilling juices and fat drip during the grilling process on the edge of lower grill plate to the fat collection container (9) (fig. on the left).
- Regularly check and empty the fat collection container (9).
- Before cleaning, always leave the device and the fat collecting pan to completely cool down.
- Remove the fat collection container (9) from the device, clean and thoroughly dry before reinstalling.

Device start-up

- Connect the device to the single grounded socket.
- Switch on the device with **ON/OFF** switch, setting it in position “I”. The red indicator light (16) (fig. on page 30) will come on signalling that the device is turned on.
- Heat the device for at least 20 minutes without food inside, setting it at 200°C (see section “Settings”), to remove any production residuals. Due to use of industrial greases smoke may be emitted from the device. That smoke will not occur during the next use. When heating up the device, make sure there is appropriate air circulation in the room.


Settings

Temperature

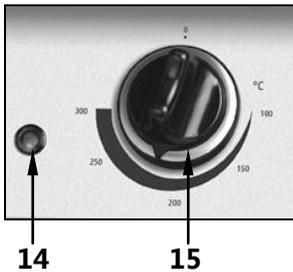

- Heat the device to required temperature before placing food inside. Set temperature with use of temperature control knob (15) (fig. on the left). Temperature may be set in range from 100 °C to 300 °C, the optimum grilling temperature is 250 °C - 280 °C.
Green heating indicator (14) is on during heating and goes off after reaching the preset temperature.

Time

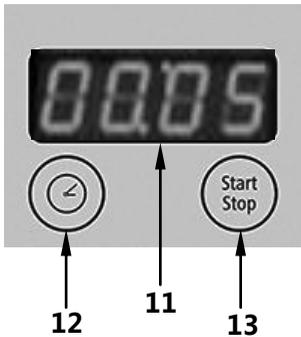

- It is possible to set time of final cooking of selected food when required.
- To do this, use the time setting button (12). The digital display (11) shows „SET“.
- Use **Start/Stop** button (13), the digital display (11) shows set number.
Press the time setting button (12) until the digital display shows the selected value. After 2 seconds the setting will be accepted automatically. Set other values and confirm them with **Start/Stop** button (13).
- When the preset time passes the acoustic signal is emitted.

Instructions for preparation of food

- **The contact grill** is designed for gentle preparation of food with a very low amount of fat.
- Use oil of high smoke point, such as rapeseed or sunflower seed oil.
- Meat and fat require smaller amounts of oil, because they already contain grease; when grilling fish and vegetables more oil can be applied on the lower grill plate. The addition of oil reduces sticking or burning of food on the grilling surface.
- To avoid transmission of smell and taste of one food to another, remove their remains from the grilling surface between subsequent grilling stages.

Grilling/heating

- Set temperature (up to 300°C) suitable for selected food and turn the device on. The heating time is approx. 25 - 30 minutes.
- In the meantime prepare food products for grilling or heating.
- Open the pre-heated device by lifting the upper grill plate using the handle until it stops.
- Use heat-resistant brush to spread the vegetable oil on the lower grill plate or spray the plate with baking oil three or four times. It allows for closing the large pores and creation of coating. It is also possible to use the cooking paper during preparation of food.

Hints: When preparing bakery products it is not required to apply oil on the grill plates.

- Put selected food on the plates.
- Close the device by lowering the upper grill plate using the handle. When required, adjust the upper grill plate with use of knob in front of that plate.
- Never leave the device unattended during grilling.



HOT SURFACE! Risk of burns!

During the operation the external surface of the contact grill is very hot. Never touch the device during operation or shortly after. Use the appropriate handle when opening and closing the device.

- After grilling is finished, open the device with the handle and remove the grilled food.
- Avoid using hard or sharp objects to prevent grill plates from damaging. You may use wooden spatula, heat resistant tongs or heat resistant plastic forks.

Turn the device off

- To turn the device off set the temperature control knob to position “0” and **ON/OFF** switch to position “**OFF**”.

6. Cleaning and maintenance



WARNING!


Before cleaning switch the device off with use of ON/OFF switch and disconnect it from the power supply (pull the plug!). Let the device to cool down.

Never clean the device with use of pressurized water jet!

Make sure that no water gets into the device.

Cleaning

- Clean the device after each working day or also between the grilling processes, when required.
- Use soft cloth only and **never** use any kind of abrasive cleaning agents which may scratch the surface of the device.
- **Never use** any aggressive agents or sprays.
- Open the device and remove the grilling residuals from the **upper and lower grill plate** using appropriate scrapper by depositing the remains to the fat collection container (fig. on the right) or wipe it with the paper towel.
- Clean the upper and lower grill plate with a soft cloth soaked in warm water. Dry the grill plates and apply a small amount of vegetable oil on them.
- In case of the hardest dirt, lubricate the still warm grill plates with vegetable oil and leave to soak for a few minutes and then clean off the dirt with a paper towel.
- Pull out the **fat collecting pan** from the device. Empty and clean it with a mild cleaning agent and a soft cloth or sponge. Wipe additionally with clear water. Dry the fat collection container thoroughly before reinstalling in the device.
- **Housing** and **handle** should be wiped with cloth moistened with warm water and gentle cleaning agent. All cleaned surfaces should be dried thoroughly.

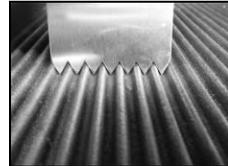

Maintenance

- We recommend to order the maintenance of the device in the professional service company at least once a year. Works interfering in the device must be realized by the professional and qualified personnel.

Storage

- If the device is not used for any lengthy period, clean it according to the aforementioned description and store it in dry, clean place protected against cold, sun and children. Do not place any heavy objects on the device.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal.

For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.