

IK 334Z



105.934

1. General Information	20
1.1 Information about the instruction manual	20
1.2 Key to symbols	20
1.3 Liability and Warrantees	21
1.4 Copyright protection	21
1.5 Declaration of conformity	21
2. Safety	22
2.1 General information	22
2.2 Safety instructions for use of the device	22-23
2.3 Intended use	23
3. Delivery, packaging and storage	24
3.1 Delivery check	24
3.2 Packaging	24
3.3 Storage	24
4. Technical data	25
4.1 Technical specifications	25
4.2 Overview of parts	25
5. Installation and operation	26
5.1 Functionality of induction cookers	26
5.2 Safety instructions	26-28
5.3 Suitable and unsuitable cookware	28-29
5.4 Installation and connection	29
5.5 Operating	30-34
6. Cleaning and maintenance	34
6.1 Safety advice	34
6.2 Cleaning	35
6.3 Safety instructions for maintenance	35
7. Possible Malfunctions	35-36
8. Waste disposal	36

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120

1. General information

1.1 Information about the instruction manual

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards, which could lead to injury.

Please follow the instructions very carefully and proceed with particular attention in these cases.



WARNING! Electrical hazard!

This symbol draws attention to potential electrical hazards. If you do not follow the safety instructions, you may risk injury or death.



CAUTION!

This symbol highlights instructions, which should be followed to avoid any risk of damage, malfunctioning and/or breakdown of the device.



NOTE!

This symbol highlights tips and information, which have to be followed for an efficient and trouble-free operation of the device.



WARNING! Hot external surface!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!

1.3 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology. If you have any questions, you should contact the manufacturer.



NOTE!

Read the instruction manual carefully before using the device. The manufacturer does not accept liability for any damage or malfunction resulting from not following the instructions for use.

The instruction manual should be kept near the device, easily accessible for anyone wishing to work with or using it. We reserve the right to make technical changes for purposes of developing and improving the useful properties.

1.4 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

1.5 Declaration of conformity

The device complies with the current standards and directives of the EU.

We certify this in the EC declaration of conformity.

If required we will be glad to send you the according declaration of conformity.

2. Safety

This section provides an overview of all important safety aspects.

In addition every chapter provides precise safety advice for the prevention of dangers which are highlighted by the use of the above mentioned symbols.

Furthermore, attention should be paid to all pictograms, markers and labels on the device, which must be kept in a permanent state of legibility.

By following all the important safety advice you gain an optimal protection against all hazards as well as the assurance of a safe and trouble-free operation.

2.1 General Information

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

Knowing the contents of the instruction manual as well as avoiding mistakes and thus operating this device safely and in a fault-free manner is very essential to protect yourselves from the hazards.

To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.

This device may only be operated in technically proper and safe condition.

2.2 Safety instructions for use of the device

The specifications regarding the industrial safety are based on the Regulations of the European Union applicable at the time of manufacturing the device.

If the device is used commercially, the user is obliged to ensure that the said industrial safety measures concur with the state of the rules and regulations applicable at the time in question for the entire period of use of the device and to comply with the new specifications.

Outside the European Union, the industrial safety laws applicable at the place of installation of the device and the regional territorial provisions must be complied with.

Besides the industrial safety instructions in the instruction manual, the general safety and accident prevention regulations as well as environment protection regulations applicable for area of application of the device must be followed and complied with.



CAUTION!

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with the device.
- Preserve this manual safely. When passing on/selling the device to a third party, the manuals must be handed over along with the device.
- Every person using the device must act in accordance to the manuals and under consideration of the safety advice.
- The device is to be used indoors only.

2.3 Intended use

Safe operation is only guaranteed when using the device for its intended purpose.

Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

The induction cooker should not be used in conjunction with an external timer or remote control.

The induction cooker is intended **only** for the **preparation and warming** of foods using the appropriate cookware.

Do not use the induction cooker to:

- Heat liquids or substances that are flammable, harmful to health or easily escaping;
- Heat sealed cans or other containers. Cans may explode, always open the lid first and remove it.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.

4. Technical data

4.1 Technical specifications

Name	Induction cooker IK 334Z
Code-No:	105.934
Material:	housing: plastic, heating plate: glass
Power levels:	cooking zones: 1 – 1-10 , 2 – 1-5 , 3 – 1-10
Temperature range:	60°C to 240°C, in increments of 20°C
Time adjustment:	to 180 minutes, in increments of 5 minutes
Power:	3.4 kW 230 V 50/60 Hz
Dimensions:	W 510 x D 485 x H 66 mm
Weight:	6.9 kg

Subject to technical changes and alterations!

4.2 Overview of parts



- ① Cooking zone 1
- ② Cooking zone 2
- ③ Cooking zone 3
- ④ Control panel with digital display
- ⑤ Housing

5. Installation and operation

5.1 Functionality of induction cookers

With induction cooker, an electric voltage is applied on a conductor spool beneath the glass. This creates magnetic fields, which directly heat up the bottom of the cookware through a physical effect.

This means saving time and energy, because contrary to common hotplates, the cookware is heated up, not the heating element and the glass.

Due to the technical characteristics described above, another advantage is the very short start-up cooking time.

In addition, the heat supply promptly adapts to changed settings and can be controlled in small steps. The induction cooker reacts to changed settings just as fast as a gas stove, as the energy reaches the pot immediately without having to heat up other materials first.

The induction technology combines this fast reaction with the basic advantage of electricity, meaning being able to exactly adjust the heat supply.

Additional advantages of an induction cooker:

- As the cooking zone is only heated up indirectly via the bottom of the cookware, over spilling food cannot stick and burn and there is hardly any danger of burns for the user. The glass cooking zone is only heated up by the hot cookware.
- If the device is turned on and no dish for cooking is present or is removed, a repeating audio signal will sound and the device will turn itself off after approx. 30 seconds.
- The device will detect if the appropriate cookware is placed on the heating plate. If the cookware is not appropriate for induction hotplates, energy will not flow. The device will turn off after approx. 30 seconds.
- When operating the cooking zone with empty cookware, a temperature sensor turns it off automatically.

5.2 Safety instructions



WARNING! Electrical hazard!

The device must only be connected to a properly installed single socket with protective contact.

Never yank cord to disconnect from outlet.

Cable must not touch any hot parts.

- See that the cable does not touch any heat sources or sharp edges. Do not let the cable dangle over the counter edge.



WARNING! Hot external surface!

During operation some parts of the device become very hot. Do not touch the hot surface of the glass field.

Please note: the induction cooker does not heat up itself during cooking, but the temperature of the cookware heats up the cooking zone.

- Do not use the device in case it does not function properly, has been damaged or dropped.
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.



WARNING! Hazard via electrical current!

Do not insert any objects like wires or tools into the ventilation slots.

This may cause electric shocks.

- Do not move the induction cooker during cooking or with hot cookware on top of it.
- Do not use the device as a surface for storing various items. Do not leave such objects as empty containers, etc. on it.
- We recommend not placing any metal kitchen utensils, cookware or pan lids, knives or other metal objects on the cooking zone. These may heat up when the device is turned on.
- Remember that items of jewelry such as rings, watches etc. can get hot if they are close to the heating surface.
- The cooking zone's surface consists of temperature-resistant glass. In case of damage, even if this concern only a small tear, disconnect the device from the power supply immediately and contact the customer service.
- Do not place any magnetically objects like credit cards, cassettes etc. on the glass surface while the device is in operation.
- On order to avoid overheating, do not place any aluminum foil or metal plates on the device.
- Do not use any flammable, acidy or alkaline materials or substances near the device, as this may reduce the service life of the device and lead to deflagration when the device is turned on.
- Scientific tests have proven that induction cookers do not pose a risk. However, persons with a pacemaker should keep a minimum distance of 60 cm to the device while it is in operation.



WARNING! Hazard via electrical current!

The device can cause injuries due to improper installation!

Before installation the local power grid specification should be compared with that of the device (see type label). Connect the device only in case of compliance!

Take note of the safety advice!

5.3 Suitable and unsuitable cookware

Suitable cookware

- o Iron cookware;
- o Enameled iron cookware;
- o Steel or enameled iron pots / pans;
- o Cast iron pots / pans;
- o Stainless steel 18/0 and aluminum cookware, if they are marked as suitable for induction cookers (pay attention to the description of the cookware).



To ensure correct operation, all the pots and pans must have a magnetic bottom (the bottom needs to attract the magnet).

In order to achieve better results only pots and pans with a diameter of 16 to 26 cm should be used.

e.g.

Induction cookware, 9-piece cooking pot set

chromium-nickel steel • edge suitable for pouring • cold handles

4 pots with lid

2.0 litres • Ø 16 cm • height 10.0 cm

2.7 litres • Ø 18 cm • height 11.0 cm

5.1 litres • Ø 24 cm • height 11.5 cm

6.1 litres • Ø 20 cm • height 20.0 cm


1 pan

2.8 litres • Ø 24 cm • height 6.5 cm

Bartscher order no. A130.442

Unsuitable cookware

- Cookware with a convex bottom;
- Aluminium, bronze or copper cookware. The exception is cookware clearly labeled as suitable for induction cookers;
- Pots / pans with a diameter less than 12 cm;
- Cookware with feet;
- Ceramic cookware;
- Glass cookware.

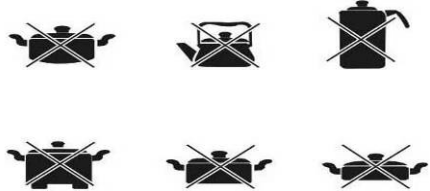

CAUTION!

Only cookware which is clearly marked as suitable for use with induction cookers should be used.


If the induction cooker detects too large of a deviation with respect to the magnetic cookware, this will result in a loss of power, and also the overheating protection might not work. For this reason cookware made of aluminium, bronze or non-metalic materials should not be used.



5.4 Installation and connection

- Discard the complete packing material after unpacking the device.
- Place the device on top of an even and safe surface which supports the weight of the device and is not heat sensitive.
- **Never** place the device on a flammable surface (e.g. table cloth, carpet, etc.).
- Do not place the device near open fireplaces, electric ovens/arc furnaces, furnaces/electric heaters or other heat sources.
- Do not block or partially cover the ventilation opening allowing the inflow and outflow of air to the device. This may cause the device to overheat. Keep the device a minimum of 5 – 10 cm from walls and other objects.
- Do not place the induction cooker next to devices or objects, which react sensitively to magnetic fields (e.g. radios, TVs, etc.).
- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.
- The device should be placed in an area with easy access to the plug, in order to quickly remove it from the socket if necessary.



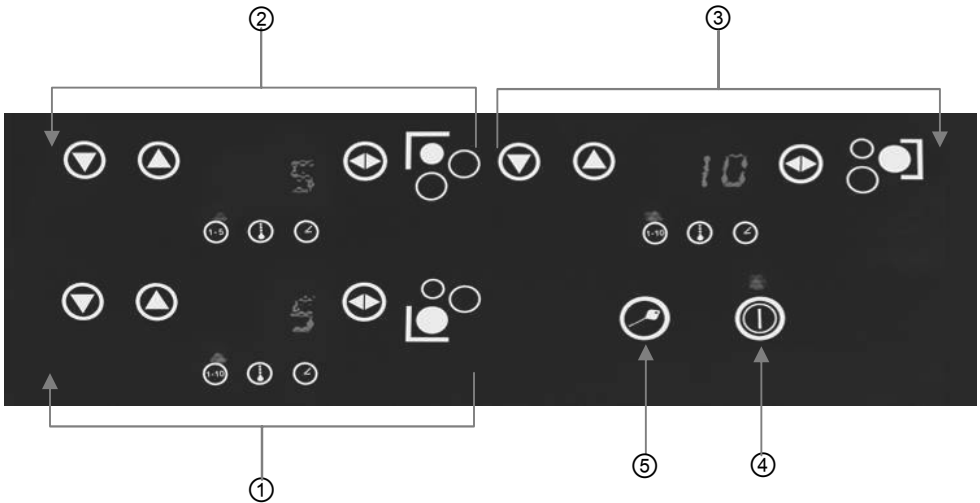




5.5 Operating

Control panel



- ① Controls for **cooking zone 1**
- ② Controls for **cooking zone 2**
- ③ Controls for **cooking zone 3**
- ④ **ON / STANDBY button** 
- ⑤ Lock button 

Indicators and buttons functions

-  Reducing power, temperature or time
-  Increasing power, temperature or time
-  Function selection button
-  Time adjustment LED indicator
-  Temperature level LED indicator
-   Power level LED indicator

Turning on the device

- The device has 3 cooking zones, which may be used independently of each other. The controls are used to set the parameters of individual cooking zones.
- To turn on the device, insert the plug into a single, grounded outlet. A signal sounds.
- On the displays of individual cooking zones will appear the letter **"-L-"** or **"-H-"** (if the temperature of the cooking zones is less than 50 °C, on the display will appear **"-L-"**, if the temperature of the cooking zones is higher than 50 °C, on the display will appear **"-H-"**).
- The device is in standby mode.
- Place the appropriate cookware with food in the middle of the selected cooking zone.




CAUTION!

Never place empty cookware on the heating plate.

Heating an empty pot or pan activates the overheating protection, a signal sounds and the device turns off.


The display will show the error message "E05".

In this case, remove the cookware from the heating plate and wait a few minutes for the device to cool down. After a few minutes the device should operate without any problem.

- Press the **ON / STANDBY button** . The LED indicator above the button starts to flash.



NOTE!



If within 30 seconds from pressing the button  **no settings are adjusted, the device automatically button to standby.**

- Select one or more cooking zones using the appropriate button:

Cooking zone 1 

Cooking zone 2 

Cooking zone 3 

- On the display of the selected zone the letter **"-L-"** or **"-H-"** disappears.
- The LED indicator lights up for the power level  or  in the selected cooking zones and the default power level of **"5"** is shown.
- The unit is ready to select the next function.



NOTE!

For normal cooking or steaming (max. temperature 170 °C) select one of the power levels.

For frying or deep frying (max. temperature 240°C) select one of the temperature levels.

Settings





1. Power adjustment

- If the mode of control is selected using power, set the selected power level using the buttons or . The selected power level for the appropriate cooking zone will appear on the display.
- The set power level can be changed at any time using the buttons or .
- **Cooking zone 3** has 10 power levels and the possibility of regulation, independent from the two other cooking zones.
- **Cooking zones 1 and 2** may be used individually or at the same time. In their case the 2000 W power is divided into two zones.
- In the case of using **only cooking zone 1** it is possible to set the power level in the range .
- In the case of using **only cooking zone 2** it is possible to set the power level in the range .
- In case of the simultaneous use of **cooking zones 1 and 2**, both fields are programmed by default to the level of "5".
- In the case of setting the power of **cooking zone 1 above "5"**, the power of **cooking zone 2** is automatically reduced so that the total sum equals 10. The appropriate power levels are visible on the displays.
- If the power level of **cooking zone 1** will be set at **less than "5"**, it is possible to use the maximum level of "5" for **cooking zone 2**.

Possible settings while simultaneously using cooking zones 1 + 2

	Power level settings									
Cooking zone 1	10	9	8	7	6	5	4	3	2	1
Cooking zone 2 (max.)	0	0	2	3	4	5	5	5	5	5





2. Setting the temperature

- The temperature of individual cooking zones can be set independently from each other.
- Press the function button  of a given cooking zone to go to the temperature mode. The display shows the pre-programmed temperature of "120°C" and the temperature level LED indicator  lights up.
- Using the buttons  or  you can change the setting at any time in the range of 60 – 240°C in increments of 20°C.

(Temperature levels: 60, 80, 100, 120, 140, 160, 180, 200, 220 and 240°C).

- The device heats the food and then maintains the set temperature at a constant level. The power regulation occurs automatically.

3. Setting the time:

- After selecting power or temperature level, press again the function button  to set the time. The time adjustment LED indicator  lights up, and on the display appears "0".
- By using the  button you can **extend** the time of operation in **increments of 5 minutes** (5,10,15...) to a max. of 180 minutes.
- Using the  button you can **shorten** the time by **increments of 1 minute**.
- The time setting is counted in increments of 1 minute, and the remaining time is shown on the display.
- After the set time has lapsed, a signal will sound and the unit automatically button to standby mode.



NOTE!





The time settings can be changed at any time when the device is operating

using the buttons  or .


Thanks to the memory function that the device is equipped with, the set power or temperature levels do not change.

In a similar way, it is possible to change the power or temperature levels, without any change to the time set.




- You should be careful so that the bottom of cookware does not scratch the cooking zones, although scratching the surface does not adversely affect its use.

- In order to turn off individual cooking zones, press the appropriate button  or  or . To turn off the entire device, press the **ON / STANDBY button** .
- **After cooking or maintaining temperature has finished, remove the plug from its socket (do not solely depend on the cookware detection function)!**


4. Lock button

The device is equipped with a lock button .

The button can be turned on after selecting the operating mode (power or temperature level), in order to prevent accidental operation.

Press and hold the lock button  until the control lamp lights up over the button. After pressing the lock button  **all other buttons** are blocked and **do not operate** (except the **ON / STANDBY button** .

The lock button also fulfills the function of a parental blockade and prevents children from turning on the device.

In order to turn off the lock, press and hold the button  until the control lamp goes out over the button. At this point all buttons are active again and can be used.

6. Cleaning and maintenance

6.1 Safety advice

- Before beginning with repair or cleaning works make sure the device has been disconnected from power socket (pull the power plug!) and has cooled down.
- Do not use any acid agents and make sure no water ingresses the device.
- To protect yourself from electric shock, **never** immerse the device, its cables and the plug in water or other liquids.



CAUTION!

The device is not suited for direct washing via water jets. Therefore, you must not use any kind of pressure water jet for cleaning the device!

6.2 Cleaning

- The device should be cleaned regularly.
- The heating plate and housing should be cleaned with a soft, damp cloth and a mild, non-abrasive cleaner.
- Avoid clogging the vent openings at the rear of the device. Dirt or dust should be removed with a brush or blower.
- **Never** use for cleaning products containing benzene or solvents, to avoid damaging the surface of the device.
- Use only a soft cloth. **Never** use any type of abrasive cleaners that could scratch the surface.
- After cleaning, wipe dry and polish the surface with a soft, dry cloth.

6.3 Safety instructions for maintenance

- Check the mains connection cable for damage from time to time. Never operate the device when the cable is damaged. A damaged cable must immediately be replaced by customer service or a qualified electrician to avoid dangers.
- In case of damage or malfunction, please contact your stockist or our customer service centre. Pay attention to the troubleshooting tips in pt. 7.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**

7. Possible Malfunctions

Error code	Cause	Solution
E01	<ul style="list-style-type: none"> • Short term voltage drop (< 160V). 	<ul style="list-style-type: none"> • Remove the device from the socket (pull the plug!). After a few minutes, reconnect the device.
E02	<ul style="list-style-type: none"> • Short term over-voltage (> 270V). 	<ul style="list-style-type: none"> • Remove the device from the socket (pull the plug!). After a few minutes, reconnect the device.
E03	<ul style="list-style-type: none"> • Overheating of the device (e.g. due to covered ventilation openings) • Damaged parts (e.g. transistor). 	<ul style="list-style-type: none"> • Clear ventilation openings. Leave the device for a few minutes to cool. After a few minutes the device is again ready to operate. If after cooling the error message still appears on the display, contact the salesperson. • Contact the salesperson.

Error code	Cause	Solution
E05	<ul style="list-style-type: none">In the power level operation mode, the overheating protection comes on: (> 150 °C). The device turns off.	<ul style="list-style-type: none">Remove the cookware from the heating plate. Leave the device for a few minutes to cool. After a few minutes the device is again ready to operate.
E06	<ul style="list-style-type: none">Damaged temperature sensor or short circuit.	<ul style="list-style-type: none">Contact the salesperson.
E07	<ul style="list-style-type: none">In the temperature operation mode, the overheating protection comes on: (> 240 °C). The device turns off.	<ul style="list-style-type: none">Remove the cookware from the heating plate. Leave the device for a few minutes to cool. After a few minutes the device is again ready to operate.
E08	<ul style="list-style-type: none">Defective temperature sensor.	<ul style="list-style-type: none">Contact the salesperson.

8. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



NOTE!



For the disposal of the device please consider and act according to the national and local rules and regulations.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120