

1,25L



900005

ENGLISH

Table of contents

1. Safety 18
1.1 Safety instructions 18
1.2 Key to symbols 21
1.3 Proper use 22

2. General information 23
2.1 Liability and Warrantees 23
2.2 Copyright protection 23
2.3 Declaration of conformity 23

3. Transport, packaging and storage 24
3.1 Delivery check 24
3.2 Packaging 24
3.3 Storage 24

4. Technical data 25
4.1 Overview of parts 25
4.2 Technical specification 25

5. Installation and operation 26
5.1 Installation 26
5.2 Operation 27

6. Cleaning 31

7. Waste disposal 31

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- The device can be used by children **8 years and up**, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the device and its possible dangers. **Children** should not play with the device.
- Cleaning and **maintenance cannot be performed by children** younger than 8 years old and must be done under supervision.
- **Children under the age of 8 years old** must be kept away from the device and its power cord.
- **Never** leave the device unattended when in use.
- Only use the device indoors.

- This device may only be operated in technically proper and safe condition.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not lay the power cable over carpets or other inflammable materials. Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Never immerse the appliance, the power cord and the power plug in water or other liquids.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



CAUTION!

To avoid damaging the device, observe the following instructions.

- **Never** use the ceramic inner pot for storing food in the refrigerator or freezer, then heat it in the outer pot immediately after taking it out. Rapid changes in temperature may cause the inner pot to crack.
- Avoid other rapid changes in temperature: such as placing the hot glass lid and hot inner pot in cold water or on a wet surface.
- Handle the ceramic inner pot and glass lid with care to ensure they do not fail prematurely, for instance – avoid bumping the glass lid and ceramic inner pot into faucets or other hard objects / surfaces.
- Stop using the glass lid or inner ceramic pot if they have been impacted, are cracked or heavily scratched.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The chocolate warmer is intended for home use or in similar places such as:

- in kitchens, for store or office employees or in other service locations;
- in agricultural holdings;
- by guests of hotels, motels and other typical places of accommodation;
- in Bed & Breakfasts.

The chocolate warmer is intended only for **melting and maintaining the temperature of the heated chocolate**.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer is **not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.

4. Technical data

4.1 Technical specification

Name	Chocolate warmer 1,25L
Code-No.:	900005
Material:	outer pot: stainless steel inner pot: ceramic, removable
Capacity:	1.25 l
Temperature ranger:	ca. 40 °C - 58 °C
Power:	0.12 kW / 230 V 50/60 Hz
Dimensions:	W 230 x D 220 x H 200 mm
Weight:	2.0 kg

We reserve the right to make technical changes!

4.2 Overview of parts



- 1 Glass lid handle
- 2 Glass lid
- 3 Control panel
- 4 Feet (3)
- 5 Outer pot
- 6 Outer pot handle
- 7 Inner pot

5. Installation and operation

5.1 Installation

- Unpack the device and remove the packing material.



CAUTION!

- **Never** remove the nameplate and warning signs from the device.
- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** place the device on an inflammable surface.
- **Never** place the device at the edge of a table to avoid tilting or falling.
- **Never** put the device in a moist or wet area.
- Do not place the device near open flame, electric heaters or other heat source.
- Place the device so that the plug is easily accessible so as to quickly disconnect the device if the need arises.

Connection



DANGER! Electric shock hazard!

**The device can cause injuries due to improper installation!
Before installation and connecting the local power grid
specification should be compared with that of the device (see
rating plate). Connect the device only in case of compliance!
Connect the device only to properly installed single socket
with protective terminal.**

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

Before first use

- Before the first use of the chocolate warmer, wash the removable inner pot and the glass lid in warm water with a mild cleaning agent, rinse with clean water and dry thoroughly.
- Wipe the outer pot on the inside and outside with a soft, moist cloth to remove dust from packing and transport.



CAUTION!

Never immerse the outer pot in water or other liquids, do not wash under running water or in a dishwasher.

- After washing and cleaning, replace the ceramic inner pot in the outer pot. Make sure that the insert is completely dry.



CAUTION!

Do not pour any liquids into the outer pot!

- Pour a small amount of water into the inner pot and place the glass lid on it.



CAUTION!

Never use the device when completely dry, therefore do not turn the device on when the inner pot is empty.

Turning the device on

- Insert the plug into an appropriate grounded socket. The red power indicator will come on signaling that the device is connected to the power supply.
- Set the control knob to „**WARM**“ on the control panel (see section „**Settings** “). Leave the device to warm up for around 30 minutes.

A slight odour may be detected, which is quite normal. The smell will quickly disappear.

- After around 30 minutes, set the control knob to **OFF** „“ and disconnect the device from the power supply (pull the plug!).
- Leave the device to cool off for approx. 20 minutes, remove the lid and take out the inner pot from the outer pot.
- Empty the inner pot, rinse it and dry thoroughly. Replace the inner pot in the outer pot. The device is ready for melting the chocolate and maintaining the temperature of the heated chocolate.

Preparation of chocolate

- All types of chocolate – milk, dark or white chocolate – can be melted in the chocolate warmer.
- Prepare the selected chocolate. Coarse cut chocolate or chocolate in chunks is best for melting. Thanks to this, the melting process is not only more even but also takes less time. Special chocolate bars of course do not require additional cutting.

Tips for operation of the device

- Chocolate should be melted as evenly and as slow as possible. Thanks to this the resulting melted mass has equal temperature and consistency throughout its entire volume. As you know the consistency is of great importance when enjoying the chocolate.
- Please, note that due to the different contents of cocoa, fat and sugar, different types of chocolate required different melting temperatures.
- Place the prepared chocolate in the inner pot and cover it with the glass lid.
- **Never** fill the ceramic inner pot to the top edge. Always use the device with the lid on and the ceramic inner pot properly placed inside.
- Connect the device to the appropriate socket.
- Select the appropriate setting using the control knob. Observe the instructions presented in the section „**Settings**“.

Settings



„“ OFF position

The device is switched off in this setting.

„“

Select this setting for **fast melting** of chocolate. Supervise the melting process.

The melting temperature of **white or milk chocolate** is within the range from approx. 40 °C, the dark chocolate - from approx. 58 °C.

After melting the chocolate, set the control knob in the position relevant for the selected type of chocolate in order to maintain its temperature.

„“ – for white and milk chocolate
Maintained temperature ca. 40 °C

lub „“ – for dark chocolate
Maintained temperature ca. 58 °C

„“ **white / milk chocolate**

This setting can be selected to **slowly** melt the **white or milk chocolate**.

After reaching the melting temperature of a given chocolate, the heater is switched off. After cooling phase, the heater switches on again and maintains the temperature of the melted chocolate at the level of approx. 40 °C.

During heating do not remove the lid, if possible.



NOTE!

Frequent removing of the glass lid during heating, reduces the temperature in the inner pot.



„Dark chocolate“

- This setting can be selected to **slowly** melt the **dark chocolate**, e.g. bitter chocolate.
- After reaching the melting temperature of a given chocolate, the heater is switched off. After cooling phase, the heater is switched on again and maintains the temperature of the melted chocolate at the level of approx. 58 °C.

During heating do not remove the lid, if possible.



NOTE!

The melting process in settings „“ and „“ is quite long.

We recommend melting the chocolate using the setting „**WARM**“, and then

using the settings „“ or „“ to maintain the temperature of the melted chocolate.

- When the chocolate has reached the required consistency, remove the glass lid. Always use the handle to lift the glass lid. Before removing the lid, set the lid slightly ajar to let the hot steam escape.
- The melted chocolate can be used according to your personal taste (e.g. for decorating a layer cake, cakes and other pastries, for fruit dishes, fondue, etc.).



- When finished using the chocolate warmer, set the control knob to **OFF** „“ and disconnect the device from the power supply (pull the plug!).

6. Cleaning



WARNING!

Disconnect the device from the power supply (unplug!) before cleaning. Let the device cool down.

The device is not designed to be rinsed with running water.

Do not use a pressure washer to clean the device!

Be careful and do not let the water into the device.

- Always clean the device after the use.
- Use only soft cloth or sponge and **never** use abrasive cleaning agents which may scratch the device.
- **Clean** inner pot and glass lid with warm water with a mild cleaning agent. Rinse thoroughly with clean water. Wipe dry the cleaned parts with a soft cloth.
- If there are any chocolate residue at the bottom of the inner pot, pour some warm water inside the pot and leave the inner pot for a few hours for the residues to get soaked. They can be easily cleaned afterwards.
- Wipe the outer pot on the inside and outside with a soft, moist cloth and then wipe it dry and polish with a soft, dry cloth.

Storage of the device

- If the device is not used for any lengthy period of time, clean it according to the aforementioned description and store it in dry, clean place protected against cold, sun and children. Do not place any heavy objects on the device.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.