

PS 1L-W



850048

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2020-11-03

Original instruction manual

Technical data


Name:	Disinfectant dispenser PS 1L-W
Article number	850048
Material:	aluminium, polypropylene
Volume, in l:	1
Dosing per one pump stroke, in ml:	4
Dimensions (W x D x H), in mm:	93 x 200 x 325
Weight, in kg:	0,82

We reserve the right to implement technical modifications.

Version / Characteristics

- Version: wall-mounting
- Refillable
- Filling level control: transparent plastic container
- Operation:
 - one-hand operation
 - elbow operation
 - manual
- Dosing:
 - pump system
 - spray system
- Lockable
- Features:
 - cartridge-free
 - user-friendly
 - hygienic
 - requires little maintenance
- The set includes:
 - 1 key
 - 1 wall holder
 - attachment material
- The set does not include: filling

List of Components of the Appliance

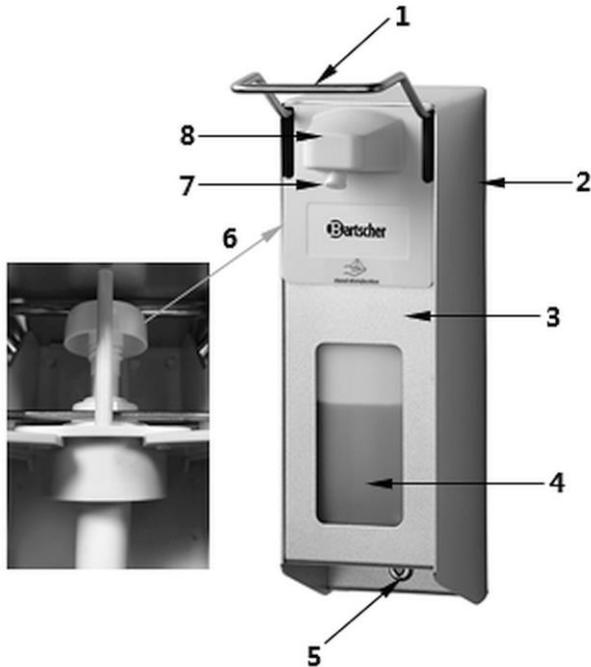

EN

- | | |
|--------------------|---------------------------|
| 1. Operating lever | 2. Housing |
| 3. Front guard | 4. Disinfectant container |
| 5. Lock | 6. Dosing pump |
| 7. Dosing head | 8. Dosing head cover |

Fig. 1

The disinfectant dispenser with practical elbow operation was designed for obtaining optimal hygiene standards in public buildings, restaurants, kitchen, laboratories, schools, etc. The cartridge-free pumping system allows for environmentally-safe filling without unnecessary complications.

Wall Mounting

1. Fix the disinfectant dispenser in a required location.
2. Observe the following information during installation:
 - space required above the disinfectant dispenser: 40 mm
 - recommended installation height: 130–135 cm, measured from the floor to the upper edge of the disinfectant dispenser.
3. Unlock the lock with the enclosed key.
4. Pull the front disinfectant dispenser cover down.
5. Slightly lift the disinfectant container and remove it from the disinfectant dispenser.
6. Press the locking button from the inside and pull the wall holder down from the housing.



Fig. 2

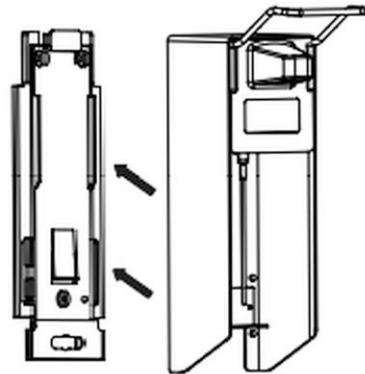


Fig. 3

7. Using the openings in the wall holder mark 3 spots to make holes and bore them in the wall.
8. Insert studs into the bored holes. Mount the wall holder with bolts.
9. Finally, slide the disinfectant dispenser housing onto the wall holder until the locking button clicks.

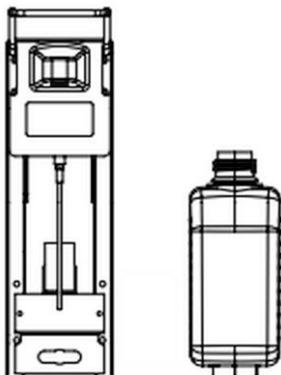


Fig. 4

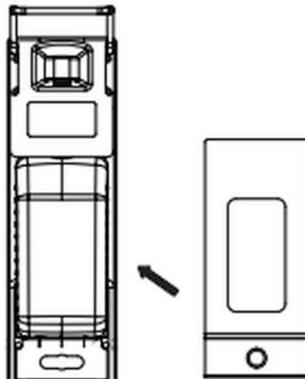


Fig. 5

10. Insert the tube into the filled-up disinfectant container and move it upwards until it stands steadily on the shelf of the housing.
11. Fix the front cover on the disinfectant dispenser.
12. Close the disinfectant dispenser with a key.

EN

Filling with Disinfectant

1. The front cover sight glass makes it possible to verify the filling level of the disinfectant container.
2. To refill the disinfectant container remove it from the disinfectant dispenser housing as described above.
3. Fill the disinfectant container with a suitable disinfectant.
4. Insert the tube into the disinfectant container and place it back into the housing, move it upwards until it stands on the lower shelf.
5. Fix the front cover.
6. Close the disinfectant dispenser with a key.

Dispensing the Disinfectant

1. Dispense the disinfectant from the container as needed by pressing your elbow against the operating lever and hold the other hand under the outlet.

Note:

At the first time operation, press the operating lever several times to the stop until the disinfectant dispenser starts dispensing. Hold your hand under the dispensing head.



Fig. 6

Cleaning and Disinfecting of Housing and Dosing Pump

ATTENTION!

For cleaning, never use any scrubbing not acute cleaning agents, neither cleaning agents that contain chlorine, as they may damage the surface.

1. Regularly perform disinfecting cleaning by wiping external surfaces of the disinfectant dispenser.
2. Before each refilling of the disinfectant dispenser thoroughly clean it manually. Follow the below described steps.
3. Remove the disinfectant container from the housing, completely empty it before refilling with a disinfectant.
4. Wash the housing, dispensing head, dispensing pump with tube thoroughly from the inside and the outside under hot running water.
5. Dry and disinfect cleaned surfaces with a disinfectant wipe.
6. If possible, do not touch the tube, otherwise wipe it with a disinfectant wipe before placing it into the disinfectant container.

7. Finally, place the housing with the dosing pump onto the wall holder.
8. Fill up the disinfectant container and place it in the housing.
9. Assemble the front cover.
10. Close the disinfectant dispenser with a key.
11. Dispense the disinfectant several times.