




300.142

TECHNICAL DATA:


Name:	<ul style="list-style-type: none"> ● Trolley / Platform trolley
Code number:	<ul style="list-style-type: none"> ● 300.142
Material:	<ul style="list-style-type: none"> ● Chrome nickel steel
Size:	<ul style="list-style-type: none"> ● W 560 x D 1050 x H 925 mm
Platform size:	<ul style="list-style-type: none"> ● W 560 x D 940 mm
Carrying capacity:	<ul style="list-style-type: none"> ● 200 kg
Weight:	<ul style="list-style-type: none"> ● 14.4 kg

Range of delivery / names of elements

	1 x plate	
	1 x handle	
	2 x swivel castors, Ø 125 mm	
	2 x fixed castors, Ø 125 mm	
	16 x washers 16 x spring washers 16 x M6*25 Allen bolts	}
	2 x washers 2 x spring washers 2 x M8*30 Allen bolts	}
	Hex wrench	

ASSEMBLY INSTRUCTIONS:

- Unpack the individual elements and verify that all parts are complete. Remove all packaging materials.
- Installation of the trolley should start by attaching the castors to the plate. To do this, place the plate on the floor. Install the swivel castors with the enclosed Allen bolts at the end of the plate, where the handle will be mounted. Between the bolt head and plate place a washer and a spring washer.
- Attach the fixed castors at the other end of the plate using the Allen bolts, washers and spring washers. Tighten the bolts with the hex wrench.

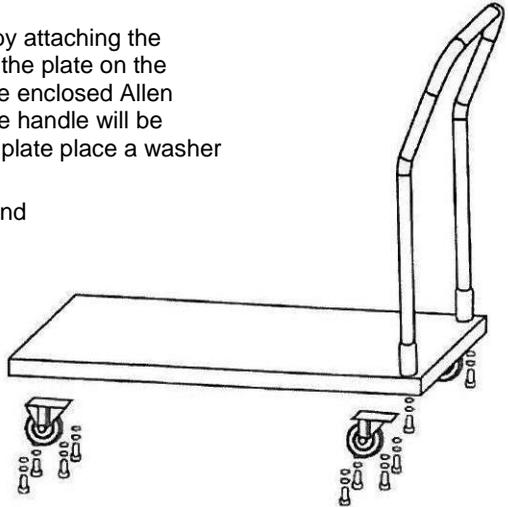

- Place the plate with wheels on one side, and firmly screw the handle to the plate with the Allen bolts, washers and spring washers.
- Carefully set the trolley on the floor. Check the stability of the trolley. If necessary, tighten the Allen bolts with the hex wrench.



NOTE!

After assembly remove the protective film!

- Use only a soft cloth and a gentle liquid cleanser to clean the trolley.
- **Never** use abrasive agents that could scratch the surface.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120