



120109

ENGLISH

Table of contents

1. Safety..... 16
1.1 Key to symbols 16
1.2 Safety instructions 17
1.3 Use as intended 20
1.4 Use against the intended purpose 20

2. General information 21
2.1 Liability and Warrantees 21
2.2 Copyright protection 21
2.3 Declaration of conformity 21

3. Transport, packaging and storage 22
3.1 Delivery check 22
3.2 Packaging 22
3.3 Storage 22

4. Technical data 23
4.1 Overview of parts 23
4.2 Technical specification 24

5. Installation and operation 24
5.1 Installation 24
5.2 Operation 25

6. Cleaning 27

7. Waste disposal 28

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



DANGER!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.2 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with or starting the device.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply (pull the plug from the socket) and contact the service company.

- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid the hazard results please follow the instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not cover the cable. Keep away the cable from operating range and do not immerse it into water or other liquids.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard will occur**.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.

1.3 Use as intended

Every use of the device for a different purpose and/or in a way that diverges from the intended use is not allowed and is assumed as the use against the intended purpose.

Any claims against the manufacturer or their authorized representatives as a consequence of experiencing damage resulting from the use against the intended purpose are inadmissible.

The liability for damage occurred during the use of the device against its intended purpose is borne solely and exclusively by the user.

Safety operation of the device is guaranteed only when it is used for its intended purpose and according to the instructions included in this manual.

The shoe shiner is intended only for cleaning and shining shoes.

1.4 Use against the intended purpose

Any use other than those mentioned in point “**1.3 Use as intended**“ is assumed as the use against the intended purpose and is not allowed.

The use against the intended purpose may lead to severe injury or damage caused by hazardous voltage, fire or high temperature. It is allowed to use the device to perform only the work described in the instruction manual. Improper use may cause the device damage.

Any manipulation with the device, assembly or maintenance work may be performed exclusively by the authorized service staff.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.

4. Technical data

4.1 Overview of parts

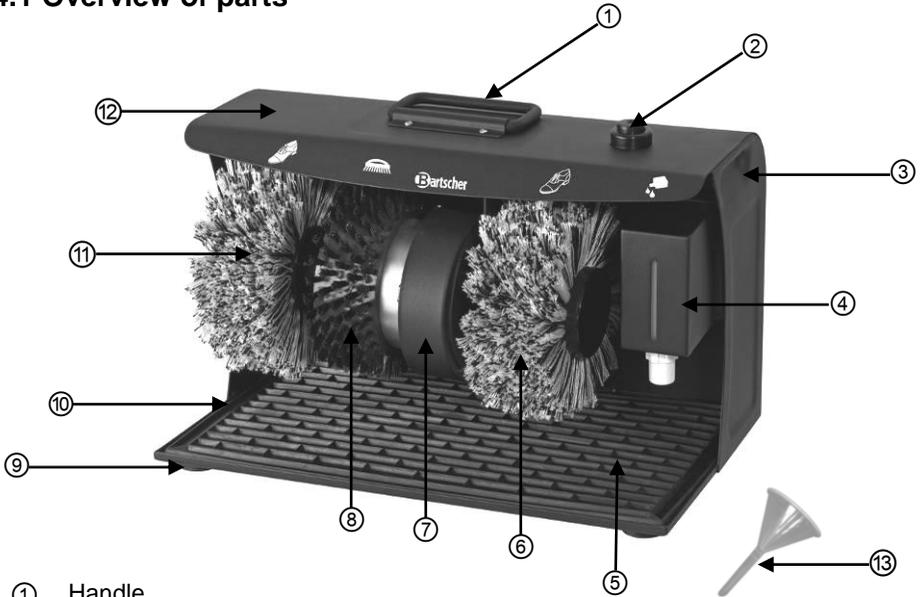

- ① Handle
- ② **ON / OFF** button
- ③ Side handles
- ④ Shoe polish dispenser with ball valve 
- ⑤ Dirt-catching mat
- ⑥ Dark colour polishing brush 
- ⑦ Motor casing
- ⑧ Cleaning brush 
- ⑨ Feet
- ⑩ Dirt-catching mat shelf
- ⑪ Light colour polishing brush 
- ⑫ Housing
- ⑬ Funnel

4.2 Technical specification

Description	Shoe polisher
Code-no.:	120109
Material:	Powder-painted steel, matt, black
Rotating brushes:	Quantity: 3 2 polyester polishing brushes for light and dark shoes; 1 cleaning brush for dirt
Power:	1,12 kW / 230 V / 50 Hz
Dimensions:	W 400 x D 240 x H 260 mm
Weight:	6.4 kg
Noise output:	≤ 60 dB(A)
Equipment:	1 funnel

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device, remove and dispose of all package material according to the environment protection regulations.



CAUTION!

Never remove the nameplate and warning signs from the device.

- Set up the device at an even and dry spot.
- Make sure this spot is easily accessible.
- Not **at any time** should you place the device on an inflammable surface.
- You must not position the device near open fireplaces, electric ovens/arc furnaces, furnaces/electric heaters or other heat sources.
- When locating the device, make sure the power plug is easily accessible to immediately unplug the device, if necessary.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation!

Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

- The power supply circuit with the socket must be protected by the fuse of at least 16A. Connect the device directly to a single grounded socket. Do not use any power bar or multiple socket.

5.2 Operation

Filling the shoe polish

- Before using the device, fill the shoe polish dispenser with an appropriate polish.
- Remove the shoe polish dispenser by squeezing it at the sides and pulling it out.
- Remove the container from the shoe polish dispenser.
- Unscrew the cap and remove the spring and ball (**Fig. 1**).
- Fill the container with 100 ml of appropriate shoe polish using the included funnel.

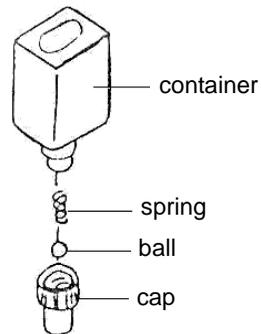


Fig. 1



NOTE!

Pay attention to the colour of shoe polish! Use a colourless polish to avoid mistakes.

- Replace the screw and ball and replace the cap on the container.
- Replace the container in the shoe polish dispenser.
- Replace the dispenser into the device by squeezing it at the sides then inserting into the support until it clicks into place.

Operating the device / polishing shoes

- Connect the device to a single grounded outlet.
- Turn on the device by pressing the **ON/OFF** button.
- First, remove dirt and dust from the shoes by using the central cleaning brush . Dirt will be removed to the mat under the brush.



NOTE!

Regularly clean or vacuum the dirt-catching mat!

- Place polish on the shoes by gently pressing the ball below the shoe polish dispenser.
- Leave the polish for a moment to dry, then shine the shoes using the polishing brushes- on the right side  for dark shoes, and on the left  for light shoes (Fig. 2).



Fig. 2



NOTE!

When polishing shoes, pay attention to the signs on the device and use the proper brushes matching the colour of the shoes!

- After polishing, turn the device off by pressing the **ON/OFF** switch.
- Pay attention to the amount of polish in the dispenser by looking at the indicator. Fill with polish as needed.
- Disconnect the device from its power source by removing the plug from its socket if the device will remain unused for a longer period.

6. Cleaning



WARNING!

Before cleaning, disconnect the device from its socket by removing the plug.
The device is not suited for direct washing via water jets!
Protect the device from water penetration.



CAUTION!

Do not use any abrasive or scouring cleaning agents, such as steel wool, steel wool containing soap, metal / plastic sponges or similar agents with abrasive surface.

- Clean the device regularly.
- Clean the casing with a soft, moist cloth and mild cleaning agent.
- Use only soft cloths for cleaning and polishing the device.
- **Never** use any substances or tools to clean the device that may scratch it.
- Regularly clean the dirt-gathering mat and its shelf with a vacuum cleaner.

Storing of the device

- If the device is not used for a longer time, clean it thoroughly according to the instructions above and store it in a dry, clean place, protected from cold, sunlight, and children. Do not place any heavy objects on the device.

7. Waste disposal

Old devices



The electric devices are marked with this symbol. You must not dispose of electric devices with household waste. When the device may not be longer used each consumer is obliged to dispose of the device at the dedicated local collection point, separately from household waste.



NOTE!

Electric devices should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the device from the power supply and remove the power cord from the device.